





 **N°Azur 0 810 811 260**
PRIX D'UN APPEL LOCAL

www.booxt.com

Figure 1

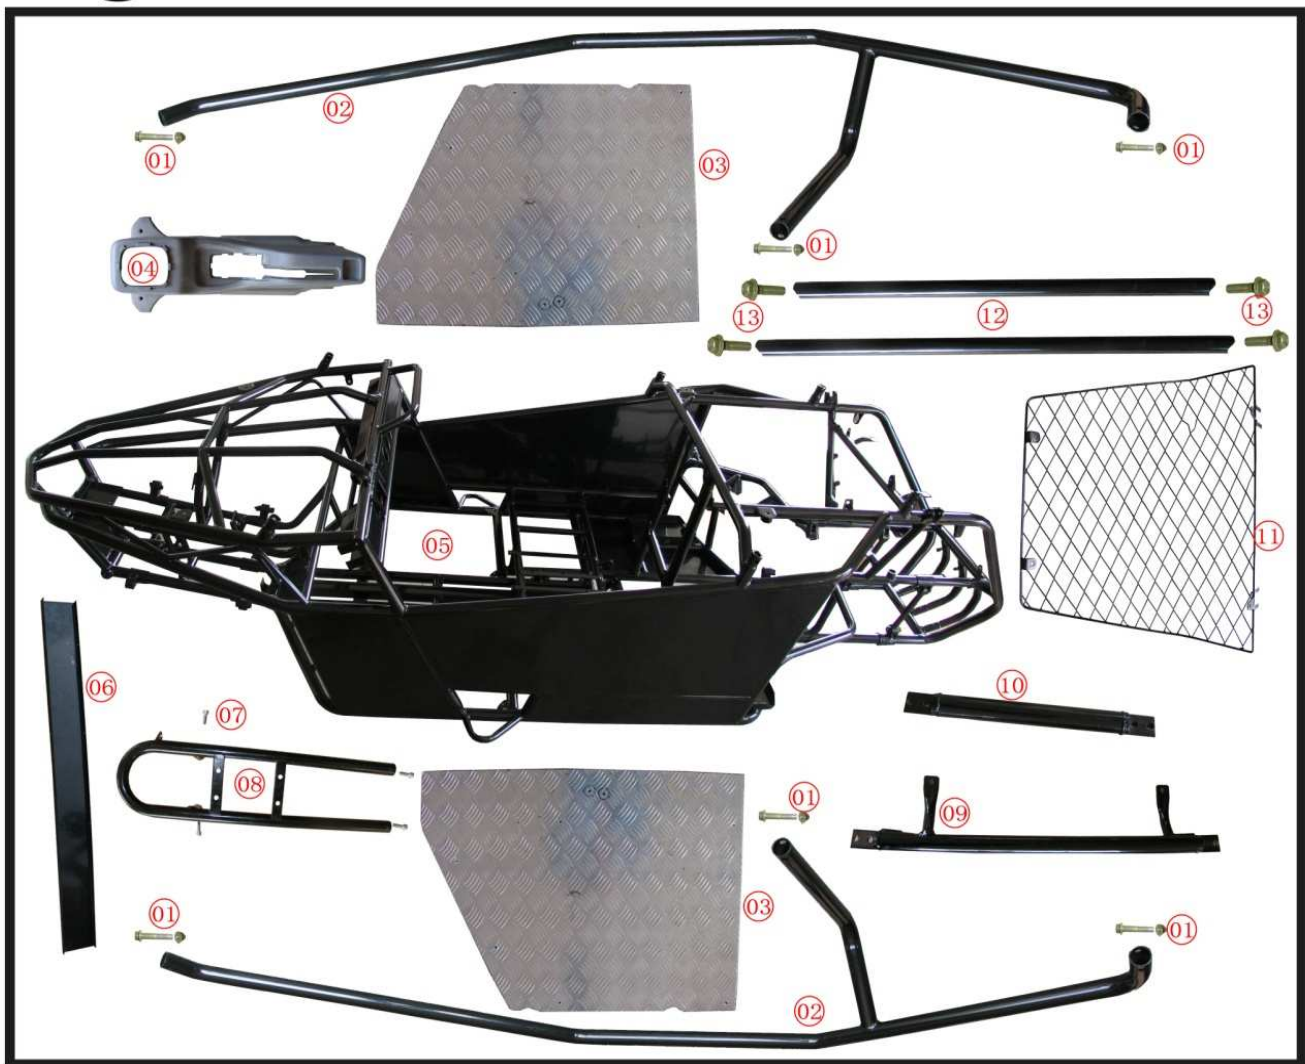


1800	1--01	六角法兰螺栓/六法自锁螺母M10*50*1.25	HEX FLANGE BOLT/NUT M10*50*1.25
1800	1--02	蓬架	ROLL CAGE
1800	1--03	铝板	ALUMINUM PLATE
1800	1--04	换档操纵座(1.1状态)	GEAR SHIFT BASE
1800	1--05	车架	FRAME
1800	1--06	仪表盒后盖(冲压件)	REAR COVER, GAUGE PANEL
1800	1--07	六角法兰螺栓/六法自锁螺母M8*20*1.25	HEX FLANGE BOLT/NUT M8*20*1.25
1800	1--08	换档杆安装支架	GEAR SHIFT BRACKET
1800	1--09	水箱固定管	RADIATOR SUPPORT
1800	1--10	发动机加固管	ENGINE HOLDER
1800	1--11	后尾防护网	REAR PROTECTIVE SCREEN
1800	1--12	横杆	CROSS MEMBER, ROLL CAGE
1800	1--13	六角法兰螺栓M12*65*1.25	HEX FLANGE BOLT M12*65*1.25
1800			

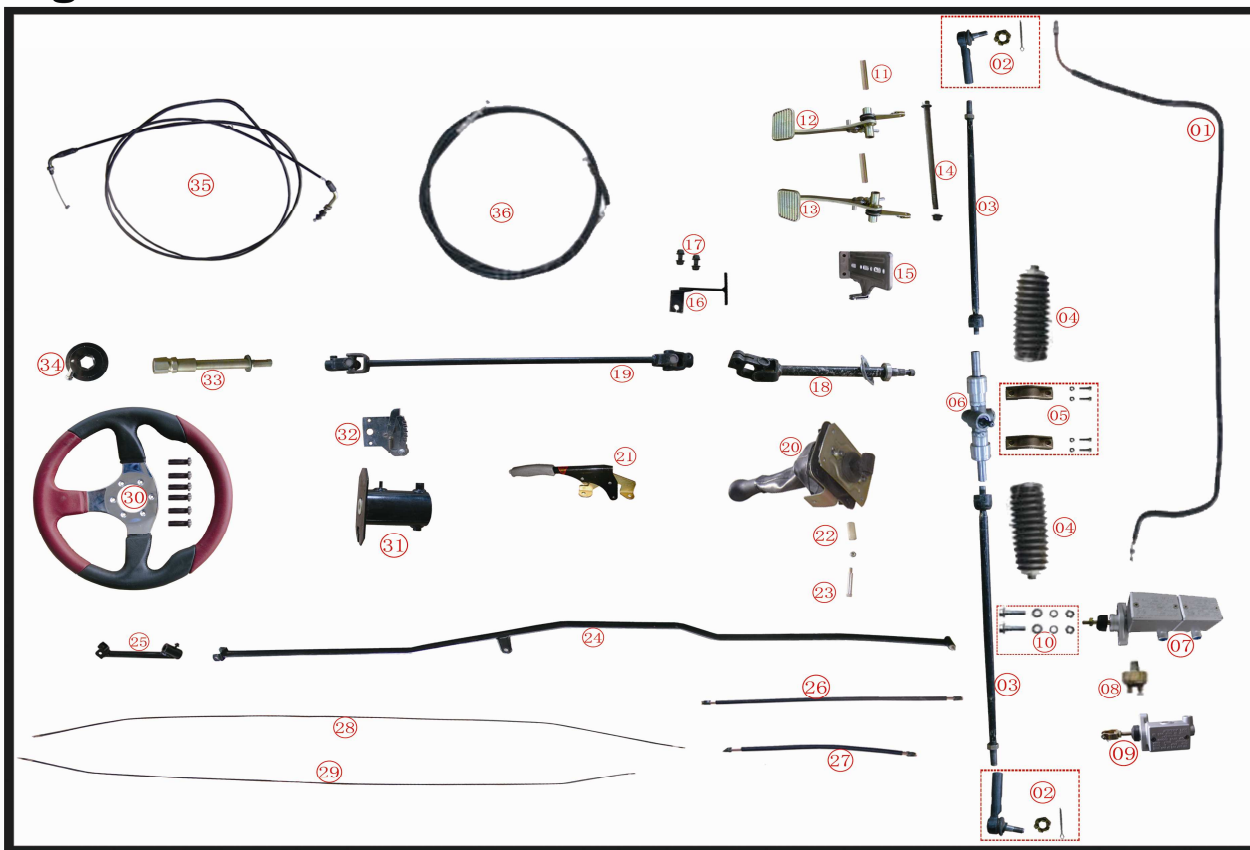Figure 2


1800	2--01	离合油管	OIL TUBE,CLUTCH PUMP
1800	2--02	横拉杆球头，螺母,开口销	BULB JOINT, NUT AND SPLINT PIN
1800	2--03	横拉杆	STEERING ROD
1800	2--04	横拉杆防尘套	DUST COVER
1800	2--05	方向机紧箍	REDIRECTOR MOUNT CLUMP, BOLT
1800	2--06	方向机	REDIRECTOR ASSY .
1800	2--07	刹车总泵	CLUTCH PUMPLE
1800	2--08	刹车灯开关	BRAKE LIGHT SWITCH
1800	2--09	离合总泵	CLUTCH PUMPLE
1800	2--10	六角法兰螺栓/六角头螺母M8*30*1.25/平垫/弹垫	HEX FLANGE BOLT/NUT M8*30*1.25/WASHER/SPRING WASHER
1800	2--11	离合踏板衬套	LINER BUSHING CLUTCH PEDAL
1800	2--12	离合踏板	CLUTCH PEDAL
1800	2--13	刹车踏板	BRAKE PEDAL
1800	2--14	六角法兰螺栓/六法自锁螺母M10*185*1.25	HEX FLANGE BOLT/NUT M10*185*1.25
1800	2--15	油门踏板	ACCELERATOR PEDAL, BOLT, NUT
1800	2--16	油门线支架	ACCELERATOR CABLE BRACKET
1800	2--17	六角法兰螺栓/六法自锁螺母M8*20*1.25	HEX FLANGE BOLT/NUT M8*20*1.25
1800	2--18	十字万向节(短)	STEERING UNIVERSAL JOINT (SHORT)
1800	2--19	十字万向节(长)	STEERING UNIVERSAL JOINT (LONG)
1800	2--20	换挡操作杆	SHIFT HANDLE
1800	2--21	手刹器	HAND BRAKE
1800	2--22	尼龙衬套	RUBBER BUSHING
1800	2--23	特性螺栓	HEX STEP BOLT
1800	2--24	换挡连接杆(长)	GEAR SHIFT ROD (LONG)
1800	2--25	换挡连接杆(短)	GEAR SHIFT ROD (SHORT)
1800	2--26	前右刹车油管L=550	L=550 PIPE, R. FR. HYDRAULIC BRAKE
1800	2--27	前左刹车油管L=400	L=400 PIPE, L.FR.HYDRAULIC BRAKE
1800	2--28	后右刹车油管L=3200	L=3200 PIPE, R. RR. HYDRAULIC BRAKE
1800	2--29	后左刹车油管L=3200	L=3200 PIPE, L.RR.HYDRAULIC BRAKE
1800	2--30	方向盘 (方向盘螺栓)	STEERING WHEEL (BOLTS AND NUTS)
1800	2--31	方向盘组合开关板固定器	SWITCH PANEL MOUNT
1800	2--32	方向盘上下调节器	STEERING WHEEL ADJUSTER
1800	2--33	方向轴	STEERING AXLE
1800	2--34	方向盘固定座	STEERING WHEEL MOUNT BASE
1800	2--35	油门拉线	THROTTLE CABLE
1800	2--36	手刹线	BRAKE CABLE

Figure 3

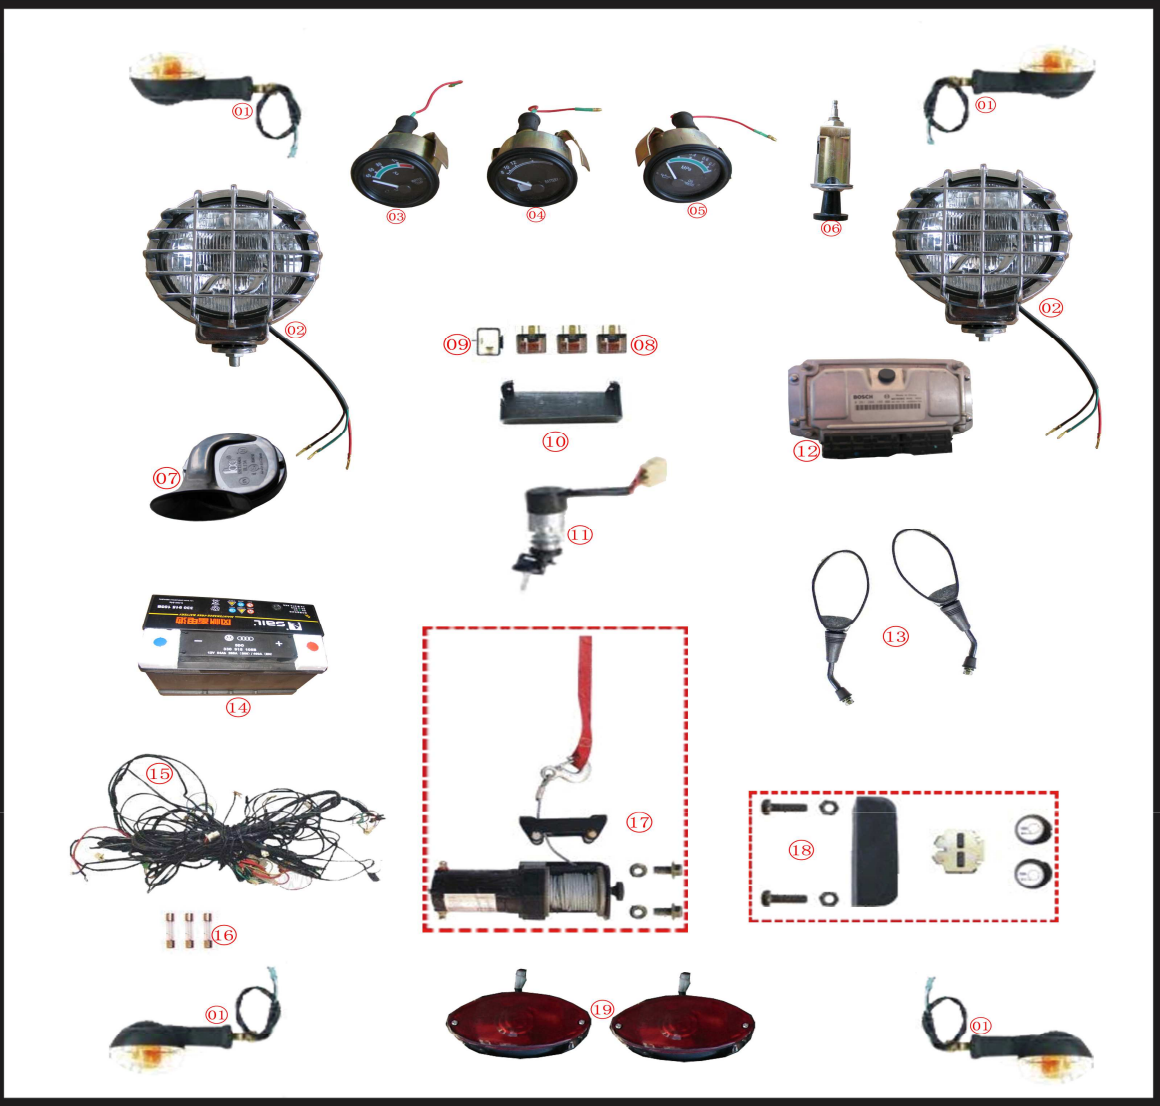


1800	3--01	转向灯	TURN LIGHT
1800	3--02	前大灯	HEAD LIGHT
1800	3--03	水温表	WATER TEMPERATURE GAUGE
1800	3--04	机油压力表	OIL PRESSURE GAUGE
1800	3--05	电压表	VALTAGE GAUGE
1800	3--06	点烟器	LIGHTER
1800	3--07	喇叭	HORN
1800	3--08	电器盒/内六角螺栓M6*75	ELE. BOX
1800	3--09	继电器	RELAY
1800	3--10	闪光器	FLASH APPARATUS
1800	3--11	保险盒后盖	FUSE BOX COVER
1800	3--12	ECU	ECU
1800	3--13	后视镜	BACK VIEW MIRROR
1800	3--14	点火开关	IGNITION SWITCH
1800	3--15	蓄电池	BATTERY
1800	3--16	主电缆	WIRE HARNESS
1800	3--17	保险丝	FUSE
1800	3--18	绞盘机	WINCH
1800	3--19	绞盘开关	WINCH SWITCH

Figure 4

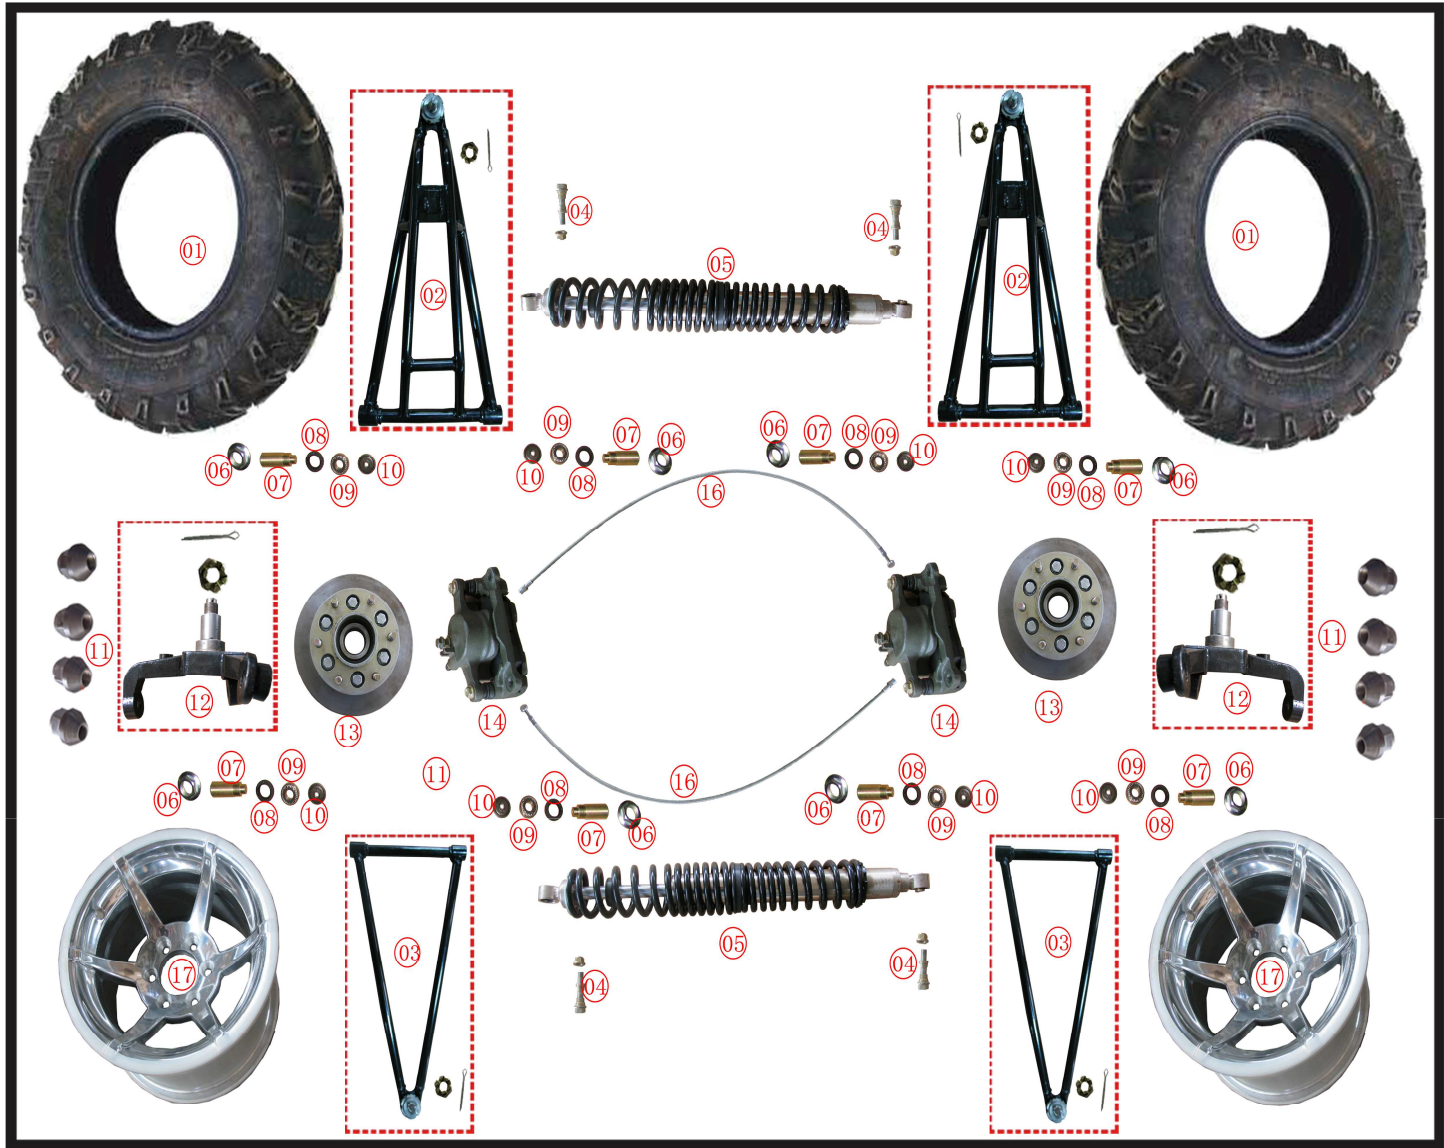

1800	4--01	前轮胎	FRONT TIRE
1800	4--02	前下摇架	FR. LOWER SUSPENSION ARM ASSY.
1800	4--03	前上摇架	FR. UPPER SUSPENSION ARM ASSY.
1800	4--04	六角法兰螺栓/六角自锁螺母M12*6	HEX FLANGE BOLT, NUTM12*60*1.25
1800	4--05	前减震器	FR. SHOCK ABSORBER
1800	4--06	六角螺母M24	HEX NUT M24
1800	4--07	摇架螺栓M24*72	SUSPENSION ARM BOLT M24*72
1800	4--08	油封22*35*7	OIL SEAL 22*35*8
1800	4--09	轴承3020Z	BEARING 3021Z
1800	4--10	摇架垫圈M8*φ35	SUSPENSION ARM WASHER M8*φ35
1800	4--11	锥形盖形螺母	TAPER-CAPPED WHEEL NUT
1800	4--12	前轮轴	FR. WHEEL SPINDLE
1800	4--13	六角开槽螺母	HEX SLOTTED NUT
1800	4--14	前轮毂总成	FRONT HUB ASSEMBLY
1800	4--15	前碟刹分泵	FR. PUMP, HYD. BRAKE
1800	4--16	前液压制动器油管L=690	OIL TUBE, FR. HYDRAULIC BRAKE L=690
1800	4--17	前轮辋	FR. RIM

Figure 5

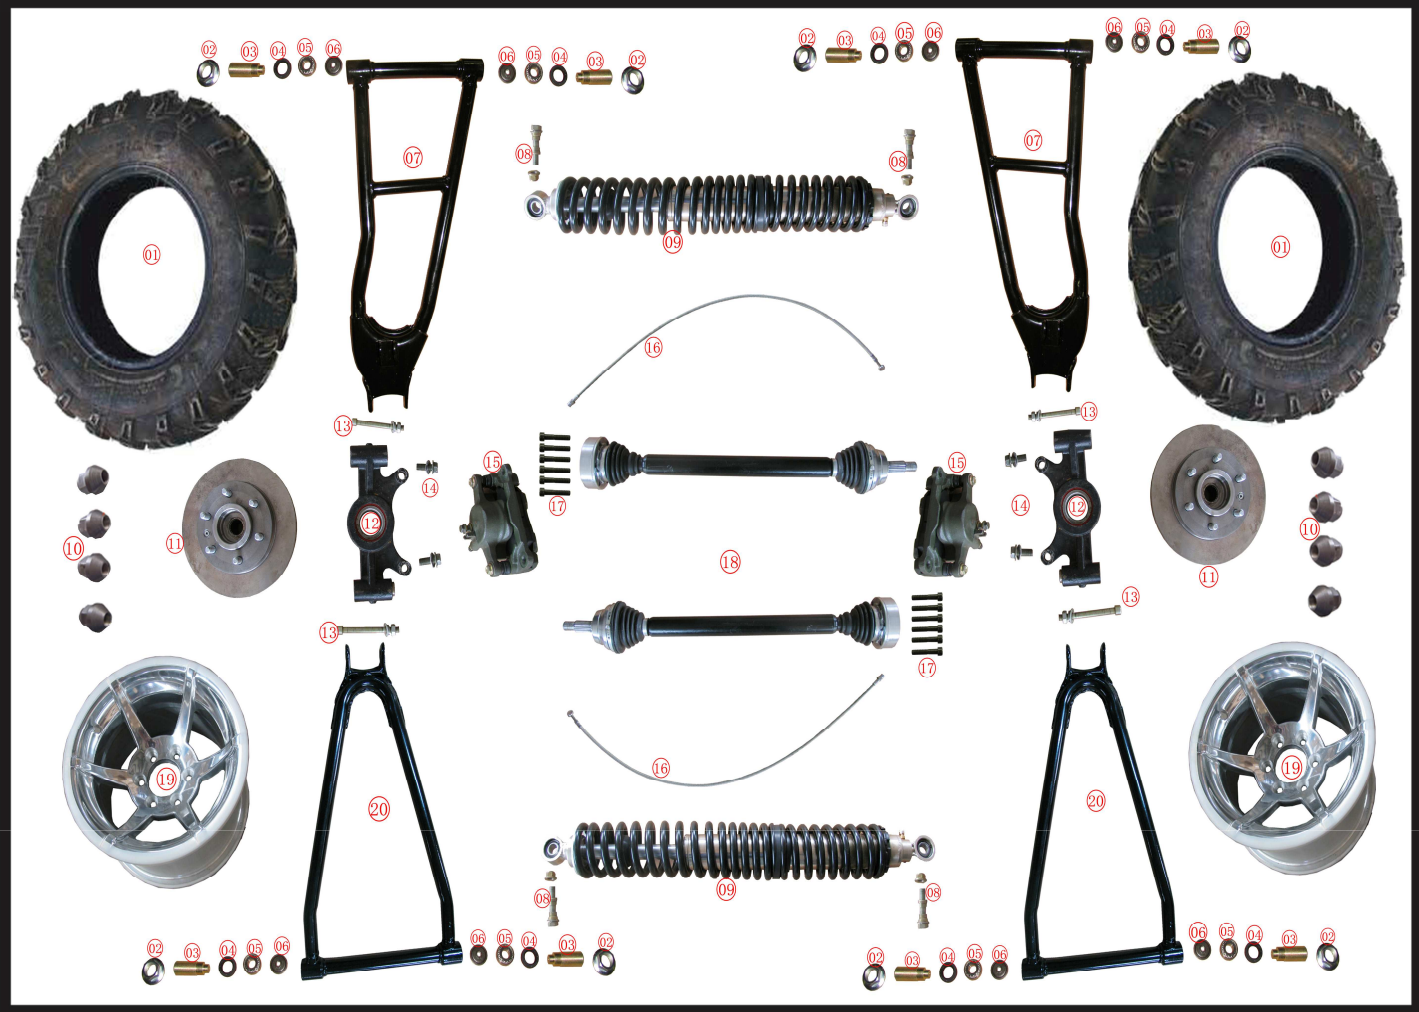

1800	5--01	后轮胎	REAR TYRE
1800	5--02	六角螺母M24	HEX NUT M24
1800	5--03	摇架螺栓M24*72	SUSPENSION ARM BOLT M24*72
1800	5--04	油封22*35*7	OIL SEAL 22*35*7
1800	5--05	轴承3020Z	BEARING 3020Z
1800	5--06	摇架垫圈M8*φ35	SUSPENSION ARM WASHER M8*φ35
1800	5--07	后上摇架	REAR UPPER SUSPENSION ARM
1800	5--08	六角法兰螺栓/六法自锁螺母M12*60*1.25	HEX FLANGE BOLT, NUT M12*60*1.25
1800	5--09	后减震器	RR. SHOCK ABSORBER
1800	5--10	锥形盖形螺母	TAPER-CAPPED NUT
1800	5--11	后轮毂总成	REAR HUB ASSY.
1800	5--12	后轮轴承座	REAR WHEEL BEARING BASE
1800	5--13	内六角螺栓/六角头螺母/平垫/弹垫M10*105*1.25	INNER HEX BOLT, NUT M10*105*1.25 WITH PLAIN AND SPRING WASHERS
1800	5--14	六角法兰螺栓M12*30*1.25	HEX FLANGE BOLT M12*60*1.25
1800	5--15	后碟刹分泵	REAR BRAKE PUMP
1800	5--16	后液压制动器油管L=1030	OIL TUBE, RR.HYDRAULIC BRAKE
1800	5--17	内六角螺栓M8*45*1.25(12.9级)	INNER HEX BOLT M8*45*1.25(12.9级)
1800	5--18	传动轴	R. DRIVE AXLE
1800	5--19	后轮辋	RR.RIM

Figure 6



1800	6--01	座椅	SEAT
1800	6--02	保险带	SEAT BELT ASSY.
1800	6--03	坐椅滑轨、调节器	RAIL / ADJUSTER, SEAT

Figure 7



1800	7--01	空滤器	AIR FILTER
1800	7--02	空滤器连接管	AIR FILTER CONNECTING PIPE
1800	7--03	六角法兰螺栓M10*20*1.25	HEX FLANGE BOLT M10*20*1.25
1800	7--04	破罐	ACTIVATED CARBON CAN
1800	7--05	水箱	RADIATOR
1800	7--06	风扇，塑料罩	RADIATOR FAN AND CAGE
1800	7--07	六角法兰螺栓,螺母 M10*16	HEX FLANGE BOLT M10*16 , NUT
1800	7--08	变速箱吊架	TRANSMISSION SUPPORT
1800	7--09	六角法兰螺栓M10*45*1.25	HEX FLANGE BOLT M10*45*1.25
1800	7--10	内六角螺栓M12*200*1.75	INNER HEX BOLT M12*200*1.75
1800	7--11	六角法兰螺栓M10*20*1.25	HEX FLANGE BOLT M10*20*1.25
1800	7--12	发动机左吊板	ENGINE SUPPORT, LEFT
1800	7--13	发动机右吊板	ENGINE SUPPORT, RIGHT
1800	7--14	消音器	MUFFLER
1800	7--15	排气管	EXHAUST PIPE
1800	7--16	消音器卡箍	MUFFLER CLAMP
1800	7--17	发动机	ENGINE
1800	7--18	发动机进水弯管	ELBOW INTAKE PIPE, ENGINE
1800	7--19	水管 1	WATER HOSE 1
1800	7--20	水管 2	WATER HOSE 2